

Installation of LED external lights for Porsche 944, 944 Turbo.


This installation includes the following:

Front:		
2 each	Turning signal/parking light Yellow	1157-18 Yellow
2 each	Side marker LED's Yellow	1156-15-Yellow
Rear:		
2 each	Turning Signal LED's - Yellow	1156-33-Yellow
2 each	Rear Brake light LED - RED	1156-33-Red
2 each	Back up light LED - Bright White	1156-33- Bright White
2 each	Side Marker LED's - RED	1156-15-Red
2 each	Tail light LED's - RED	1156-15-Red
1 each	Flasher Relay for LED Turning Signal	
1 each	Instruction	

The installation of the LED's is not different as the replacement of burned out light bulbs. However, because of the LED lights the flasher relay for the turning signal has to be replaced with the new relay included with the kit.

After all light bulbs are replaced with the new LED's, replace the flasher relay with the new one included in the kit.

The earlier 944 model have the flasher relay located at the driver side under the dash next to the fuse box. See picture below. You may switch on the turning signal, and should hear to locate the right relay. It should be # 11, as shown in the picture below.

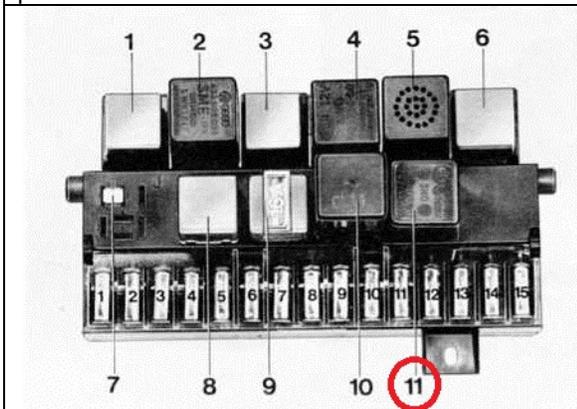

The later model have the relay located in the fuse and relay box in left side engine compartment. Check the diagram on the cover to locate the flasher relay.



Remove the relay and replace it with the new one. **ATTENTION: Do not use the new relay with the standard bulbs, it can damage the new flasher relay.**

Warranty:

The LED lights are warranted for 2 years from the date of purchase. Warranty is void when these 12 volt LED's are used with different voltage.

Please email to notify us prior to returning items for warranty exchange. Return shipping costs are the sole responsibility of the customer.

Disclaimer:

The correct installation of the LED lights is your responsibility; I cannot take any responsibility for any damage to your vehicle or equipment.