

Installation of Aluminum trim rings on Porsche 911 SC/Carrera Gauges.



These trim rings can be installed without removing the gauges. No glue or tape is needed

Instruction:

After removing the new rings from the package, try each ring on the gauge rings for fitment.


At this point they will be loose. Remove the rings and go to next step.



Next: Use a small screw driver to roll the edge of the trim ring slightly so a hook will be created. Do this for all the way around the edge. See picture.

Be careful and just do it very light and test fit. If it's still lose and will not click in, repeat it until the ring clicks in and sits firm.

Repeat this procedure for the rest of the gauges.

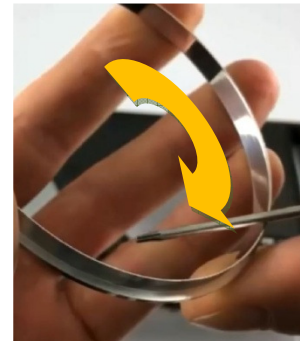

Included in this set:

- 1 ring for the tachometer
- 2 rings for Oil press/temp gauge and speedometer
- 2 rings for gas/oil level gauge and clock
- 1 instruction



Disclaimer:

The correct installation of the rings is your responsibility. I cannot take any responsibility for any damage to your vehicle or equipment.